

## Data sheet

# Actuator for modulating control AME 15 QM

### Description



AME 15 QM actuator is used with pressure independent balancing and control valve type AB-QM DN 40 to DN 100.

The actuator automatically adapts its stroke to valve end positions which reduces commissioning time.


#### Main data:

- The advanced design incorporates load related 'switch-off' to ensure that actuators and valves are not exposed to overload.
- The advanced design incorporates a diagnostic LED, operational data capture and self stroking feature.
- Hand operation.
- Low weight and robust



### Ordering

Type	Supply voltage	Code No.
AME 15 QM	24 V~	082H3075

### Technical data

Power supply	24 V~; +10 ... -15%
Power consumption	4 VA
Frequency	50 Hz/60 Hz
Control input Y	0 ... 10 V (2 ... 10 V) Ri = 24 kΩ 0 ... 20 mA (4 ... 20 mA) Ri = 500 Ω
Output signal X	0 ... 10V (2 ... 10V)
Close of force	500 N
Max. stroke	15 mm
Speed	11 s/mm
Max. medium temperature	120 °C
Ambient temperature	0 ... 55 °C
Storage and transport temp.	-40 ... +70 °C
Protection code	IP 54
Weight	0.80 kg
 - marking in accordance with standards	Low Voltage Directive 73/23/EEC, EMC - Directive 2004/108/EEC: EN 60730-1, EN 60730-2-14

DIP switch setting

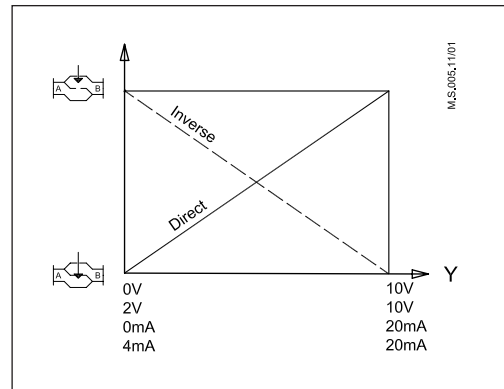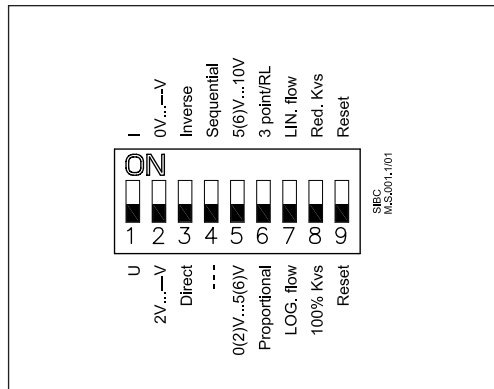

The actuator has a function selection DIP switch under the removable cover. In particular, if SW6 is set to ON, the actuator will perform as 3-point actuator.

The switch provides the following functions:

• **SW1: U/I - Input signal type selector:**

If set to OFF position, voltage input is selected. If set to ON position, current input is selected.

• **SW2: 0/2 - Input signal range selector:**

If set to OFF position, the input signal is in the range from 2 V to 10 V (voltage input) or from 4 mA to 20 mA (current input). If set to ON position, the input signal is in the range from 0 V to 10 V (voltage input) or from 0 mA to 20 mA (current input).

• **SW3: D/I - Direct or inverse acting selector:**

If set to OFF position, the actuator is direct acting (stem contracts as voltage increases). If actuator is set to ON position the actuator is inverse acting (stem extracts as voltage increases).

• **SW4: 0..5V/5...10V - Normal or sequential mode selector:**

If set to OFF position, the actuator is working in range 0(2)..10V or 0(4)..20mA. If set to ON position, the actuator is working in sequential range; 0(2)..5 (6)V or 0(4)..10 (12)mA or 5(6)..10V or 10(12)..20mA.

• **SW5: —/Seq - Input signal range in sequential mode:**

If set to OFF position, the actuator is working in sequential range 0(2)..5 (6)V or 0(4)..10 (12)mA. If set to ON position, the actuator is working in sequential range; 5(6)..10V or 10(12)..20mA.

• **SW6: Prop./3-pnt - Modulating or 3-point mode selector:**

If set to OFF position, the actuator is working normally according to control signal. If set to ON position, the actuator is working as 3-point actuator.

*For this operation please refer to page 3 (wiring 3-point control).*

When DIP switch SW6 is set to ON than all functions from other DIP switch become inactive.

• **SW7: LOG/LIN - Equal percentage or linear flow through valve selector:**

If set to OFF position, the flow through valve is equal percentage. If set to ON position, the flow through valve is linear according to control signal.

• **SW8: 100%  $K_{vs}$  /Reduced  $K_{vs}$ :**

To be set to OFF position (no sense in combination with AB-QM).


• **SW9: Reset:**

Changing this switch position will cause the actuator to go through a self stroking cycle.


Wiring



Wiring for modulating control

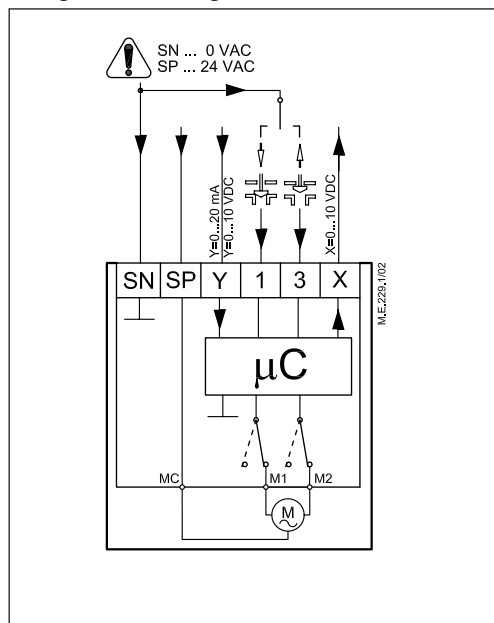

Wiring for 3-point control

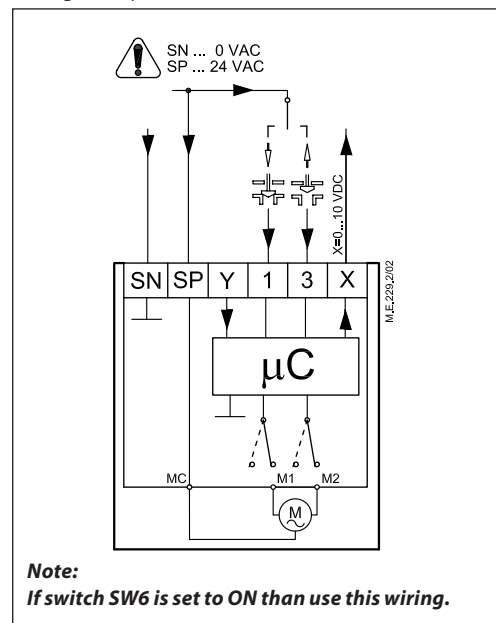

**Note:**  
If switch SW6 is set to ON than use this wiring.

Automatic self stroking feature

When power is first applied, the actuator will automatically adjust to the length of the valve stroke. Subsequently, the self stroking feature can be re-initialised by changing position of SW9.

Diagnostic LED

The red diagnostic LED is located on the pcb under the cover. It provides indication of three operational states: Actuator Healthy (Permanently ON), Self Stroking (Flashes once per second), Error (Flashes 3 times per second - seek technical assistance).

Wiring length	Recommended square of the wiring
0 - 50 m	0.75 mm <sup>2</sup>
> 50 m	1.5 mm <sup>2</sup>

- SP 24 V~ .....Power supply
- SN 0 V .....Common
- Y 0 to 10 V .....Input signal  
(2 to 10 V)  
0 to 20 mA  
(4 to 20 mA)
- X 0 to 10 V .....Output signal  
(2 to 10 V)

Commissioning

Complete the mechanical and electrical installation and perform the necessary checks and tests:

- Isolate control medium. (E.g. self stroking in a steam application without suitable mechanical isolation could cause a hazard).
- Apply the power.  
Note that the actuator will now perform the self stroking function.
- Apply the appropriate control signal and check the valve stem direction is correct for the application.
- Ensure that the actuator drives the valve over its full stroke, by applying the appropriate control signal. This action will set the valve stroke length.

The unit is now fully commissioned.


Commissioning / testing feature

The actuator can be driven to the fully open or closed positions (depending on valve type) by connecting SN to terminals 1 or 3.

Disposal

The actuator must be dismantled and the elements sorted into various material groups before disposal.

**Manual override**

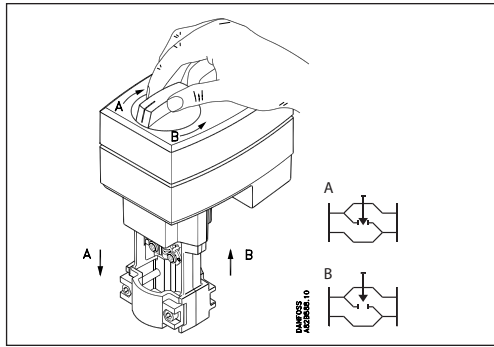


The manual override is achieved by turning the manual knob to the required position. Observe the direction of rotation symbol. If manual override has been used then X and Y signal are not correct until the actuator reaches its end position. If this is not accepted, mount accessory active return signal kit.

**Procedure**

- Disconnect power supply
- Adjust valve position using control knob
- Set valve to closed position
- Restore power supply

**Installation**

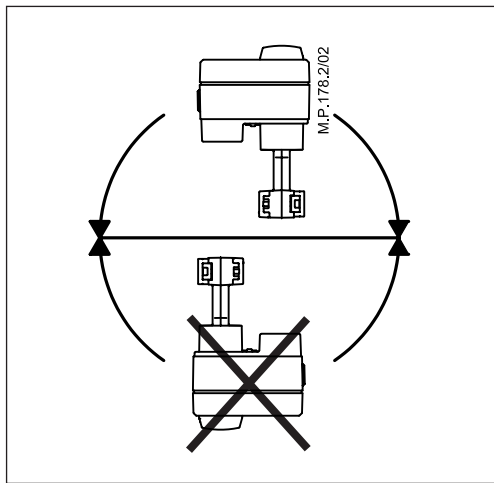

**Mechanical**


The actuator should be mounted with the valve stem in either horizontal position or pointing upwards. Use a 4 mm Allen key (not supplied) to fit the actuator to the valve body. Allow for necessary clearance for maintenance purposes.

During commissioning, fit the valve position indicator scale with the red and blue pins (supplied with the product) to mark the fully open and the fully closed position.

**Electrical**

Electrical connections can be accessed by removing the cover. Two M16 × 1.5 cable entries are provided. However, in order to maintain the enclosure IP rating an appropriate cable gland must be used.

**Dimensions**

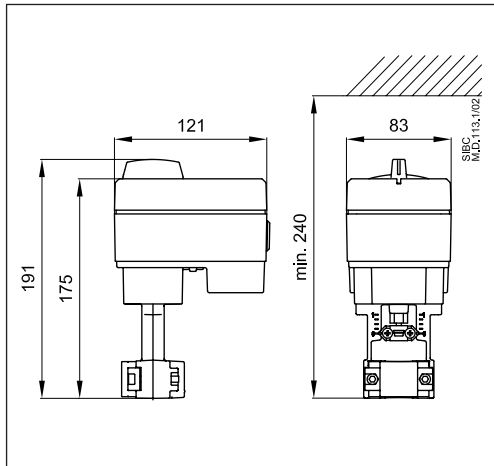

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.